UB4	00-F	77-E	2-V31

	Technical data		
	General specifications		
Lapres 10	Sensing range	25 400 mm	
Real Provide State	Adjustment range	40 400 mm	
A STATE AND A STAT	Dead band Standard target plate	0 25 mm 20 mm x 20 mm	
A CONTRACTOR	Transducer frequency	approx. 300 kHz	
Stephen C	Nominal ratings		
	Time delay before availability t_v	≤ 150 ms	
	Limit data Permissible cable length	max. 300 m	
	Indicators/operating means		
	LED yellow	switching state and flashing: Teach-In	
	Electrical specifications	24 M DC	
	Rated operating voltage U _e Operating voltage U _B	24 V DC 20 30 V DC , ripple 10 % _{SS} ; 12 20 V DC sensitivity	
C∈ (\$₽ [®] c(^U L)us		reduced to 90 %	
	No-load supply current I0	≤ 20 mA	
	Input	1 program input	
	Input type Level	1 program input low level : 0 0.7 V (Teach-In active)	
Model Number		high level : U _B or open input (Teach-In inactive)	
woder Number	Input impedance	16 kΩ	
UB400-F77-E2-V31	Pulse length Output	≥3s	
Ultrasonic direct detection sensor	Output Output type	1 switch output PNP, NO	
	Rated operating current Ie	200 mA , short-circuit/overload protected	
Features	Voltage drop U _d	≤ 2 V	
Miniature design	Switch-on delay t _{on}	≤ 75 ms ± 1 mm	
-	Repeat accuracy Switching frequency f	5 Hz	
Program input	Range hysteresis H	typ. 4 mm	
Degree of protection IP67	Off-state current Ir	≤ 0.01 mA	
Switching status indicator, yellow	Temperature influence	+ 0.17 %/K	
Switching status indicator, yellow LED	Ambient conditions Ambient temperature	-25 70 °C (-13 158 °F)	
	Storage temperature	-40 85 °C (-40 185 °F)	
Diagrams	Shock resistance	30 g , 11 ms period	
	Vibration resistance	10 55 Hz , Amplitude ± 1 mm	
Characteristic response curve	Mechanical specifications Connection type	M8 x 1 connector , 4-pin	
Distance Y [mm]	Degree of protection	IP67	
	Material		
40	Housing Transducer	Polycarbonate epoxy resin/hollow glass sphere mixture; polyurethane foam	
30	Installation position	any position	
20	Mass	10 g	
10	Tightening torque, fastening screws	max. 0.2 Nm	
0	Compliance with standards and directives		
-10	Standard conformity		
-20	Standards	EN 60947-5-2:2007 + A1:2012	
-40		IEC 60947-5-2:2007 + A1:2012	
-50			
0 100 200 300 400 500 600	Approvals and certificates		
Distance X [mm]	UL approval	cULus Listed, General Purpose	
tY	CSA approval	cCSAus Listed, General Purpose	
	CCC approval	CCC approval / marking not required for products rated ≤36 V	
		≤30 V	
r to "Conoral Notas Poloting to Pannad - Fushe Preduct Informati	۱ ۲		
r to "General Notes Relating to Pepperl+Fuchs Product Information	лі.	f	

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




UB400-F77-E2-V31

Dimensions

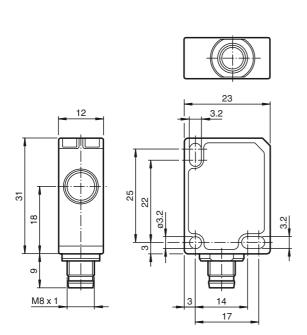

Electrical Connection



Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)



Accessories

UB-PROG4-V31

Programming unit for ultrasonic sensors with Teach-in input at pin 2

OMH-ML7-01

Mounting aid for ML7 and ML8 series, Mounting bracket

V31-GM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

V31-WM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

Description of Sensor Function


The ultrasonic sensor transmits ultrasonic packets in quick succession and responds to their reflection off the detected object. The sensor has a switch output. The switching point is progammable (Teach-In). Objects beyond the taught-in switching point are not detected (background suppression).

Teach-In of Switching Point SP

To teach in a switching point, proceed as follows:

- 1. Connect the sensor and turn on the operating voltage.
- 2. Place the object to be detected at the required distance.
- 3. Connect the teach-in input (ET) to -U_B. This can be done usingthepushbutton or the controller.
- The LED will start flashing after 3 seconds to indicate that the sensor is ready to start the teach-in process (*).
- 4. Disconnect the teach-in input (ET) with -U_B. The switching point SP has now been taught in ^(*).
- (*) If no object is detected within the sensing range of the sensor, the sensor will start flashing at a faster rate. The switching point remains unchanged.

Switching characteristics and display LED



= Object position

Mounting instruction

If the sensor is operated at temperatures below 0 °C, use the supplied distance plate. Only use the two rearmost mounting holes (located opposite to the transducer) for mounting the sensor.

Safety Note

The use of this device in applications, where the safety of persons depends from the devices function, is not allowed!



Pepperl+Fuchs Group www.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

